

99mm

Set Up Instructions

1. Select your notebook manufacturer and compatible tip(s) from the chart below.
2. Check that the selected tip fits your notebook.
3. Check the bottom label of your notebook for voltage level.

Go to the bottom of this power adapter and adjust the color coded selector switch according to your notebook voltage.

17-21V – Leave it at **Green**

14-17V – use a pen to switch to **Blue** setting (See image below)


Take a tip listed in the table below that matches your notebook and the color selected above.

Plug it into the DC plug as shown below.

4. Need help? Call **1-866-908-HELP** (4357) in the U.S. or Canada or visit www.kensington.com.


Notebook Manufacturer	Compatible Tip(s)
Acer®	C, D, E, H
Asus®	E, H
Compaq®	E, H, I
Dell®	H, J
Gateway®	D, H
HP®	E, H, I
IBM®	C, L
Lenovo®	C, H, L
Sony®	G
Toshiba®	B, H

Voltage selector switch

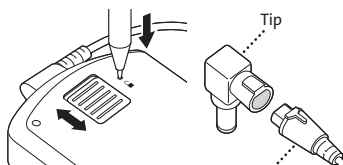

GREEN for 17-21 VDC
BLUE for 14-17 VDC

DC plug

 If a tip fits in your notebook but does not charge when plugged in please try the other compatible tips.

900-3969-00

99mm

TAZUMADESIGN

DATE: 4/2/2010

JOB#: KENSINGTON 307

DESCRIPTION: LOTUS PLUS (K38077) -
SET UP INSTRUCTIONS LABEL - US

CPN: 900-3969-00



BLACK

DIELINE